

SIGNIFY





Jukebox with Bluetooth®

Model Number: EA0403

QUICK START GUIDE

AFTER SALES SUPPORT

  1300 777 137

 service@unclebills.com.au

MODEL: EA0403 PRODUCT CODE: 46486 08/2017

Getting Started

Please refer to the instruction manual for full instructions on how to operate the Jukebox with Bluetooth®.

Remove the Jukebox and all accessories from the packaging, select a flat, stable surface to position the Jukebox.



1. Connect the Power Adaptor

Plug the figure 8 cable into the power adaptor.



2. Connect the Power Input

Plug the DC pin into the DC Power Input (located on the rear panel of the Jukebox).



3. Connect the Power

Plug the AC connector (standard mains power plug) into a nearby mains power socket and turn the mains power switch ON.



4. Standby Mode On

Press the POWER button on the Jukebox control panel to set the unit to standby mode.



5. Turn the Jukebox On

Press the ON/OFF button on the Jukebox control panel to turn the unit on and it will immediately revert to FM radio mode.



6. Open Media Window

Open the transparent window by lifting up from the bottom of the window (and swing outwards/upwards).



7. Remove Packing Material

Remove all protective packing material from the CD player and from over the lens.



8. Input Media Device

Insert CD, USB or SD card as desired or setup BLUETOOTH® (consult the Instruction Manual for full details).



9. CD player ON/OFF Lever

If using a CD, move the CD player ON/OFF lever to the left and into the "ON" position as labelled. A "click" will be heard when it is in place.



10. Music Source

Press the MODE/DEV button on the Jukebox control panel or the FUNCTION button on the remote control to change between music sources.



11. Playing the Track

Press the PLAY/PAUSE button on the control panel or the remote control to start playback.



12. Turning on the LED Lights

Press the LIGHT button once to turn on the LED lights. There is a Light Mode switch at the rear of the Jukebox to select between Play (changing colour effects) or Hold (static single colour).

IMPORTANT: Only audio files in MP3 format will play successfully on your Jukebox. Please ensure your audio files on your burnt CD, USB drive and SD card are converted to MP3 format before playing on the Jukebox.

Model Number	EA0403
Size (cm)	105 x 57 x 30
Weight	20.5 kg
Warranty	1 Year
Power Consumption	65W
Input	220-240V~ 50/60Hz 1.5A



For more information call **1300 777 137**